

Point & Shoot Digital Camera Models	PSU65 (Pouch)	PSU75 (Pouch)	PSC49 (Clam)	PSC55 (clam)
Canon PowerShot A400	X			
Canon PowerShot A550	X			
Canon PowerShot A560	X			
Canon PowerShot A630	X			
Canon PowerShot A640	X			
Canon PowerShot A570 IS	X			
Canon PowerShot A650 IS	X			
Canon PowerShot A710 IS	X			
Canon PowerShot A720 IS	X			
Canon PowerShot G9		X		
Canon PowerShot S5 IS		X		
Canon PowerShot SD750			X	
Canon PowerShot SD800 IS				X
Canon PowerShot SD850 IS	X			
Canon PowerShot SD870 IS	X			
Canon PowerShot SD950 IS	X			
Canon PowerShot SD1000			X	
Canon PowerShot SX100 IS	X			
Canon PowerShot TX1				X
Casio EX-S770 Ultra-Slim				X
Casio Exilim EX-V7				X
Fujifilm FinePix F50fd			X	
Fujifilm FinePix Z10fd			X	
Leica C-Lux 2	X			
Leica D-Lux 3	X			
Nikon Coolpix L11				X
Nikon Coolpix L14				X
Nikon Coolpix L15				X
Nikon Coolpix P4				X
Nikon Coolpix P50	X			
Nikon Coolpix P5000	X			
Nikon Coolpix P5100	X			
Nikon Coolpix S9			X	
Nikon Coolpix S10	X			
Nikon Coolpix S50/ S50C			X	
Nikon Coolpix S51/ S51C				X
Nikon Coolpix S510			X	
Nikon Coolpix S200			X	
Nikon Coolpix S500			X	
Nikon Coolpix S700			X	
Olympus FE-280				X
Olympus FE-290				X
Olympus FE-300				X
Olympus SP-550UZ		X		
Olympus Stylus 760				X
Olympus Stylus 780				X
Olympus Stylus 790SW				X
Olympus Stylus 820				X
Olympus Stylus 830				X
Samsung NV11	X			
Samsung NV15				X
Samsung NV20				X
Samsung L74WIDE 7MP	X			
Sony Cyber-shot DSC-W80			X	
Sony Cyber-shot DSC-W200			X	
Sony Cyber-shot DSC-W55			X	
Sony CyberShot DSC-H9	X			

Digital Camcorder Models For PSU75 (Pouch) Only
Canon DC310
Canon DC320
Canon DC330
Canon FS10
Canon FS11
Canon FS100
Canon VIXIA HF10
Canon VIXIA HF100
Canon VIXIA HG10
Canon VIXIA HR10
Canon VIXIA HV30
Canon ZR900
Canon ZR930
Canon ZR950
JVC GZ-HD5
JVC GZ-HD6
JVC MG 330
JVC MG 335
JVC MG 365
JVC MG 435
JVC MG 730
Sony DCR-HC62
Sony DCR-HC810
Sony DCR-HC910
Sony DCR-SR45
Sony DCR-SR65
Sony DCR-SR85
Sony DCR-SR220
Sony HDR-SR10
Sony HDR-SR11
Sony HDR-VX10
Sony HDR-VX20